


### How to close


1. Arch the closure to insert the pins



2. Fold the closure and pull the sliding strip to the "close" position.

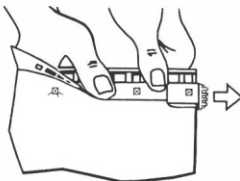


3. Apply a seal at the end of the sliding strip.

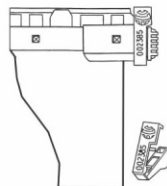

### How to open

1. Pull the slide of the seal to break it.

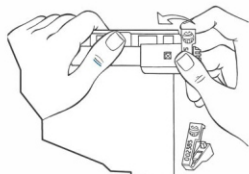

2. Push the sliding strip to "open" position and release the closure

